INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION: NERF BAR STEP PAD PACKAGE, 460002

- 1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
- 2. REMOVE OLD STEP PADS BY LIGHTLY PULLING UP FROM THE END OF THE PAD UNTIL PAD RELEASES.


NOTE: IF THE REMOVED STEP PADS WERE FASTENED BY FOUR (4) TABS (NO SCREWS) DRILL THE OUTSIDE TWO (2) STEP PAD MOUNTING HOLES (IN THE NERF BAR TUBE) TO 9/32".

- 3. INSTALL STEP PAD (ITEM # 1) BY FIRMLY PRESSING THE TABS INTO THE CENTER TWO (2) HOLES IN THE NERF BAR TUBE.
- 4. INSTALL SCREWS (ITEM #2) INTO THE TWO (2) MOLDED HOLES IN THE STEP PAD.

NOTE: DO NOT OVER TIGHTEN SCREWS (ITEM #2) AS THIS INCREASES THE RISK OF STRIPPING THE THREADS.

SERVICE PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|------|----------|-----|---------------------------------|
| 1 | 103950 | 2 | PAD-STEP, NERF BAR, BLK, 20.00 |
| 2 | 109637 | 4 | SCR, SLF-TP, 5/16-3/4, SST, BLK |

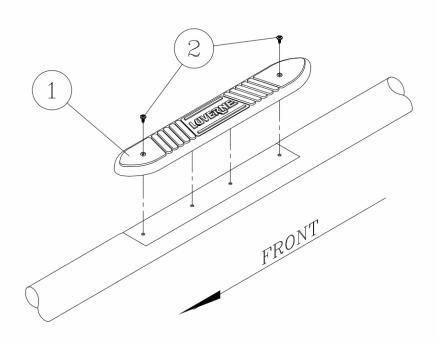



1200 E. Birch St.

Brandon, SD 57005

552488 SHEET 1 OF 1 04JUN14