


INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

Make	Model
Chevrolet	Equinox
Pontiac	Torrent
Suzuki	XL-7

CUSTOM WIRING CONNECTOR

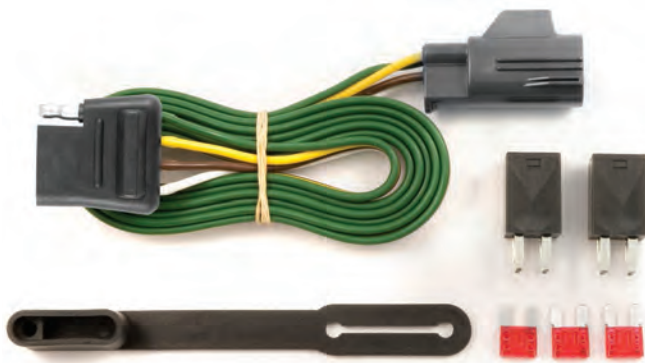

WIRING LOCATION GUIDE

SUVS, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below

S3 - Behind driver side rear access panel

S4 - Behind passenger side rear access panel



NOTICE

All steps must be followed to ensure the wiring connector will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

Panel trim removal tool

⚠ WARNING

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Locate vehicle battery on the driver side under the hood and disconnect the negative battery terminal.

Step 2

Chevrolet Equinox / Pontiac Torrent

Open the vehicle tailgate. On the driver side, locate the vehicle jack storage compartment and remove the panel and jack (A).

Suzuki XL-7

Open the vehicle tailgate. On the passenger side, locate the vehicle jack storage compartment and remove the panel and jack.

Step 3

On the bottom of the jack compartment locate the vehicle taillight 4-pin connector. It will be attached by a plastic clip. The connector will be similar to that on the custom connector (B).

Step 4

Insert the custom connector end into the vehicle 4-pin connector. Make sure the connectors are fully inserted with locking tabs in place (C).

Step 5

Open the vehicle hood and locate the fuse / relay box on the driver side near the firewall. Remove the fuse box cover taking care not to damage the locking tabs (D).

Step 6

On the inside of the cover there will be a fuse panel layout. Locate relay positions 58 and 59 (E). Place one of the provided relays into position 58 to activate the right turn, trailer stop / turn function. Place the other relay into position 59 to activate the left turn, trailer stop / turn function (F).

Step 7

Locate fuse positions 35, 37 and 43. Place one of the provided 10 amp fuses into position 35 to power the park lamp trailer function. Place the second 10 amp fuse into position 37 to power the left turn, trailer stop / turn function. Place the third 10-amp fuse into position 43 to power the right turn, trailer stop / turn function (G).

Step 8

When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in a convenient, out of the way location. Secure any loose wires with the provided cable ties.

Step 9

Reinstall all items removed during install and reconnect negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.

